

**Federal Railroad Administration, DOT**

**§ 236.560**

higher than restricted speed is permitted.

[49 FR 3386, Jan. 26, 1984]

**§ 236.533 [Reserved]**

**§ 236.534 Entrance to equipped territory; requirements.**

Where trains are not required to stop at the entrance to equipped territory, except when leaving yards and stations and speed until entering equipped territory does not exceed restricted speed, the automatic train stop, train control, or cab signal device shall be operative at least stopping distance from the entrance to such territory except where the approach thereto is governed by automatic approach signal.

**RULES AND INSTRUCTIONS; LOCOMOTIVES**

**§ 236.551 Power supply voltage; requirement.**

The voltage of power supply shall be maintained within 10 percent of rated voltage.

**§ 236.552 Insulation resistance; requirement.**

When periodic test prescribed in § 236.588 is performed, insulation resistance between wiring and ground of continuous inductive automatic cab signal system, automatic train control system, or automatic train stop system shall be not less than one megohm, and that of an intermittent inductive automatic train stop system, not less than 250,000 ohms. Insulation resistance values between periodic tests shall be not less than 250,000 ohms for a continuous inductive automatic cab signal system, automatic train control system, or automatic train stop system, and 20,000 ohms for an intermittent inductive automatic train stop system.

[49 FR 3387, Jan. 26, 1984]

**§ 236.553 Seal, where required.**

Seal shall be maintained on any device other than brake-pipe cut-out cock (double-heading cock), by means of which the operation of the pneumatic portion of automatic train-stop or train-control apparatus can be cut out.

**§ 236.554 Rate of pressure reduction; equalizing reservoir or brake pipe.**

The equalizing-reservoir pressure or brake-pipe pressure reduction during an automatic brake application shall be at a rate not less than that which results from a manual service application.

**§ 236.555 Repaired or rewound receiver coil.**

Receiver coil which has been repaired or rewound shall have the same operating characteristics which it possessed originally or as currently specified for new equipment.

**§ 236.556 Adjustment of relay.**

Change in adjustment of relay shall be made only in a shop equipped for that purpose except when receiver coils, electro-pneumatic valve, or other essential part of the equipment is replaced. Irregularities in power-supply voltage or other variable factors in the circuit shall not be compensated for by adjustment of the relay.

**§ 236.557 Receiver; location with respect to rail.**

(a) Receiver of intermittent inductive automatic train stop device of the inert roadway element type shall be maintained with bottom of the receiver at a height above the plane of the tops of the rails, and with its outer edge at a horizontal distance from the gage side of the nearest rail, in accordance with specifications of the carrier.

(b) Receiver of continuous inductive automatic cab signal, train stop, or train control device of locomotive equipped with onboard test equipment, shall be maintained with the bottom of the receiver at a height above the plane of the tops of the rails, and with its outer edge at a horizontal distance from the gage side of the nearest rail, in accordance with specifications of the carrier.

[49 FR 3387, Jan. 26, 1984]

**§§ 236.558–236.559 [Reserved]**

**§ 236.560 Contact element, mechanical trip type; location with respect to rail.**

Contact element of automatic train stop device of the mechanical trip type